

Upgrading the Software


Upgrading Aspire Mail DMS

Aspire Mail DMS Software Upgrade Procedure

Part 1: Upload the Software Update Files to Aspire Mail DMS


To upload the Aspire Mail DMS software update files:

1. Copy the software update file to a convenient location on your PC hard disk.
 - Normally, you receive this file on CD from NEC Unified Solutions Customer Service or download it from the UBSD Support Site (<http://ws1.necii.com>).
 - These are compressed files that must be decompressed in Part 2.
2. From the *Main Menu*, click **Tools: Updates**. You see the *Update Window*.

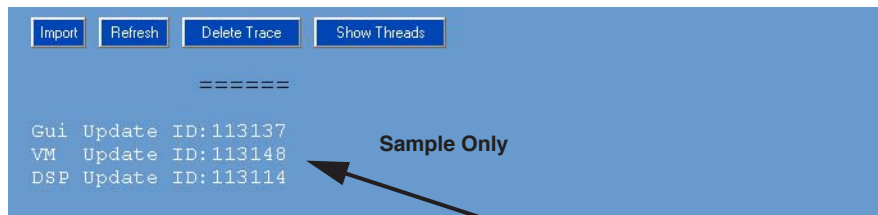


Shows previously installed Admin (Gui), Voice Mail (VM), and DSP updates (if any).

3. Click **Import**. You see the *Upload Service Window*.

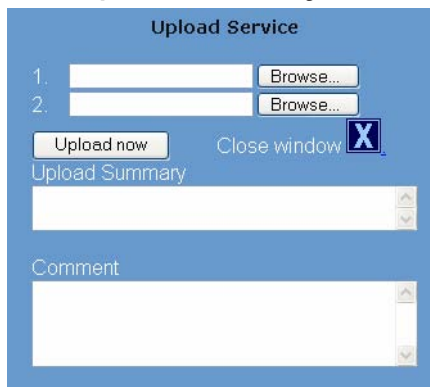

4. Click **Browse** and locate the update files you downloaded to your PC hard disk.
5. Double-click the file you want to upload.
 - Since there are two *Browse* buttons, you can upload two files at the same time.
6. Click **Upload Now** to upload the software update file to Aspire Mail DMS. When the upload completes, you see an alert similar to the following:

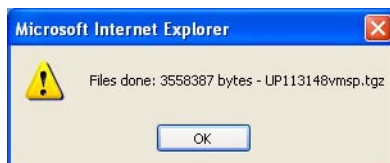

7. Click **OK** to dismiss the alert box and return to the *Upload Service Window*.
 - The *Upload Summary* box shows a summary of the update files you uploaded to Aspire Mail DMS.
8. Repeat steps 4 -6 until you have uploaded all the software update files.
9. Click **Close Window** to close the *Upload Service Window* and return to the *Update Window*.

Part 2: Decompressing the Uploaded Software Update Files

1. Now that the software update files are uploaded to the Aspire Mail DMS, click the *Update Window Refresh* button. You see the *Local Archives and Backups* window.

Action	Archive	Zap	Date	Comment	Files	Size(kb)
Update ?	UP113148vmosp.tgz		Tue Nov 8 16:45:50 EST 2005	Update	25	3559

=====
Gui Update ID:113137
VM Update ID:113148
DSP Update ID:113114

2. The files you uploaded will appear in the file list. If the update consists of multiple software update files, you must decompress the files in the following order:
 - *.web
 - *.ssl
 - *.dsp
 - *.vm
 - *.vmosp
3. To decompress a software update file, in the *Action* field click **Update**. You see an alert similar to the following:



4. Click **OK** to dismiss the alert and install the selected file.
5. When the install completes, you return to the *Local Archives and Backups* window.
6. Scroll to the bottom of the window and click **Refresh**. The *Local Archives and Backups* window refreshes.
7. When you are done decompressing the software update files, click **Tools: Post Update check** to complete the procedure.
 - Your browser will refresh (click) every few seconds until the check completes.
8. When the *Post Update Check* completes, shut down and then reset voice mail PCB.